



# Model 950/951 Keypad Programming Manual



The very first time that you apply power to the keypad, you will hear a series of beeps followed by a regular repeating beep (1 beep at 3 second intervals) that lets you know you are in programming mode.

Enter a 4 digit **Master Code** that only you will use for programming purposes. Write Master Code here \_\_\_\_\_

You can now add up to 1000 access codes as well as a flash code (for use only once) and a latch code to hold open the gate.

	Master Code	Sub Mode	Access Code	Exit
<b>Example - Master Code 2580</b> beep - ◀    accepted ●    rejected ●				
To add Access Code 1934	2 5 8 0	1 #	1 9 3 4	#
To add Access Codes 2413, 8888, and 9743 <i>(you may add up to 1000 different codes)</i>	2 5 8 0	1 #	2 4 1 3 8 8 8 8 9 7 4 3	#
To remove Access Code 1934	2 5 8 0	2 #	1 9 3 4	#
To add Flash Code 4437 <i>(for one use only)</i>	2 5 8 0	3 #	4 4 3 7	
To add Latch Code 5501	2 5 8 0	4 #	5 5 0 1	
To set relay output time 15 seconds <i>(1/2 - 60 seconds)</i>	2 5 8 0	5 #	1 5 #	
To set relay output time 1/2 second	2 5 8 0	5 #	0 #	
To change Master Code from 2580 to 1234	2 5 8 0	7 #	1 2 3 4	#
To clear all Access, Flash, and Latch codes	2 5 8 0	8 #		