


# CREATIVE IRON WORKS

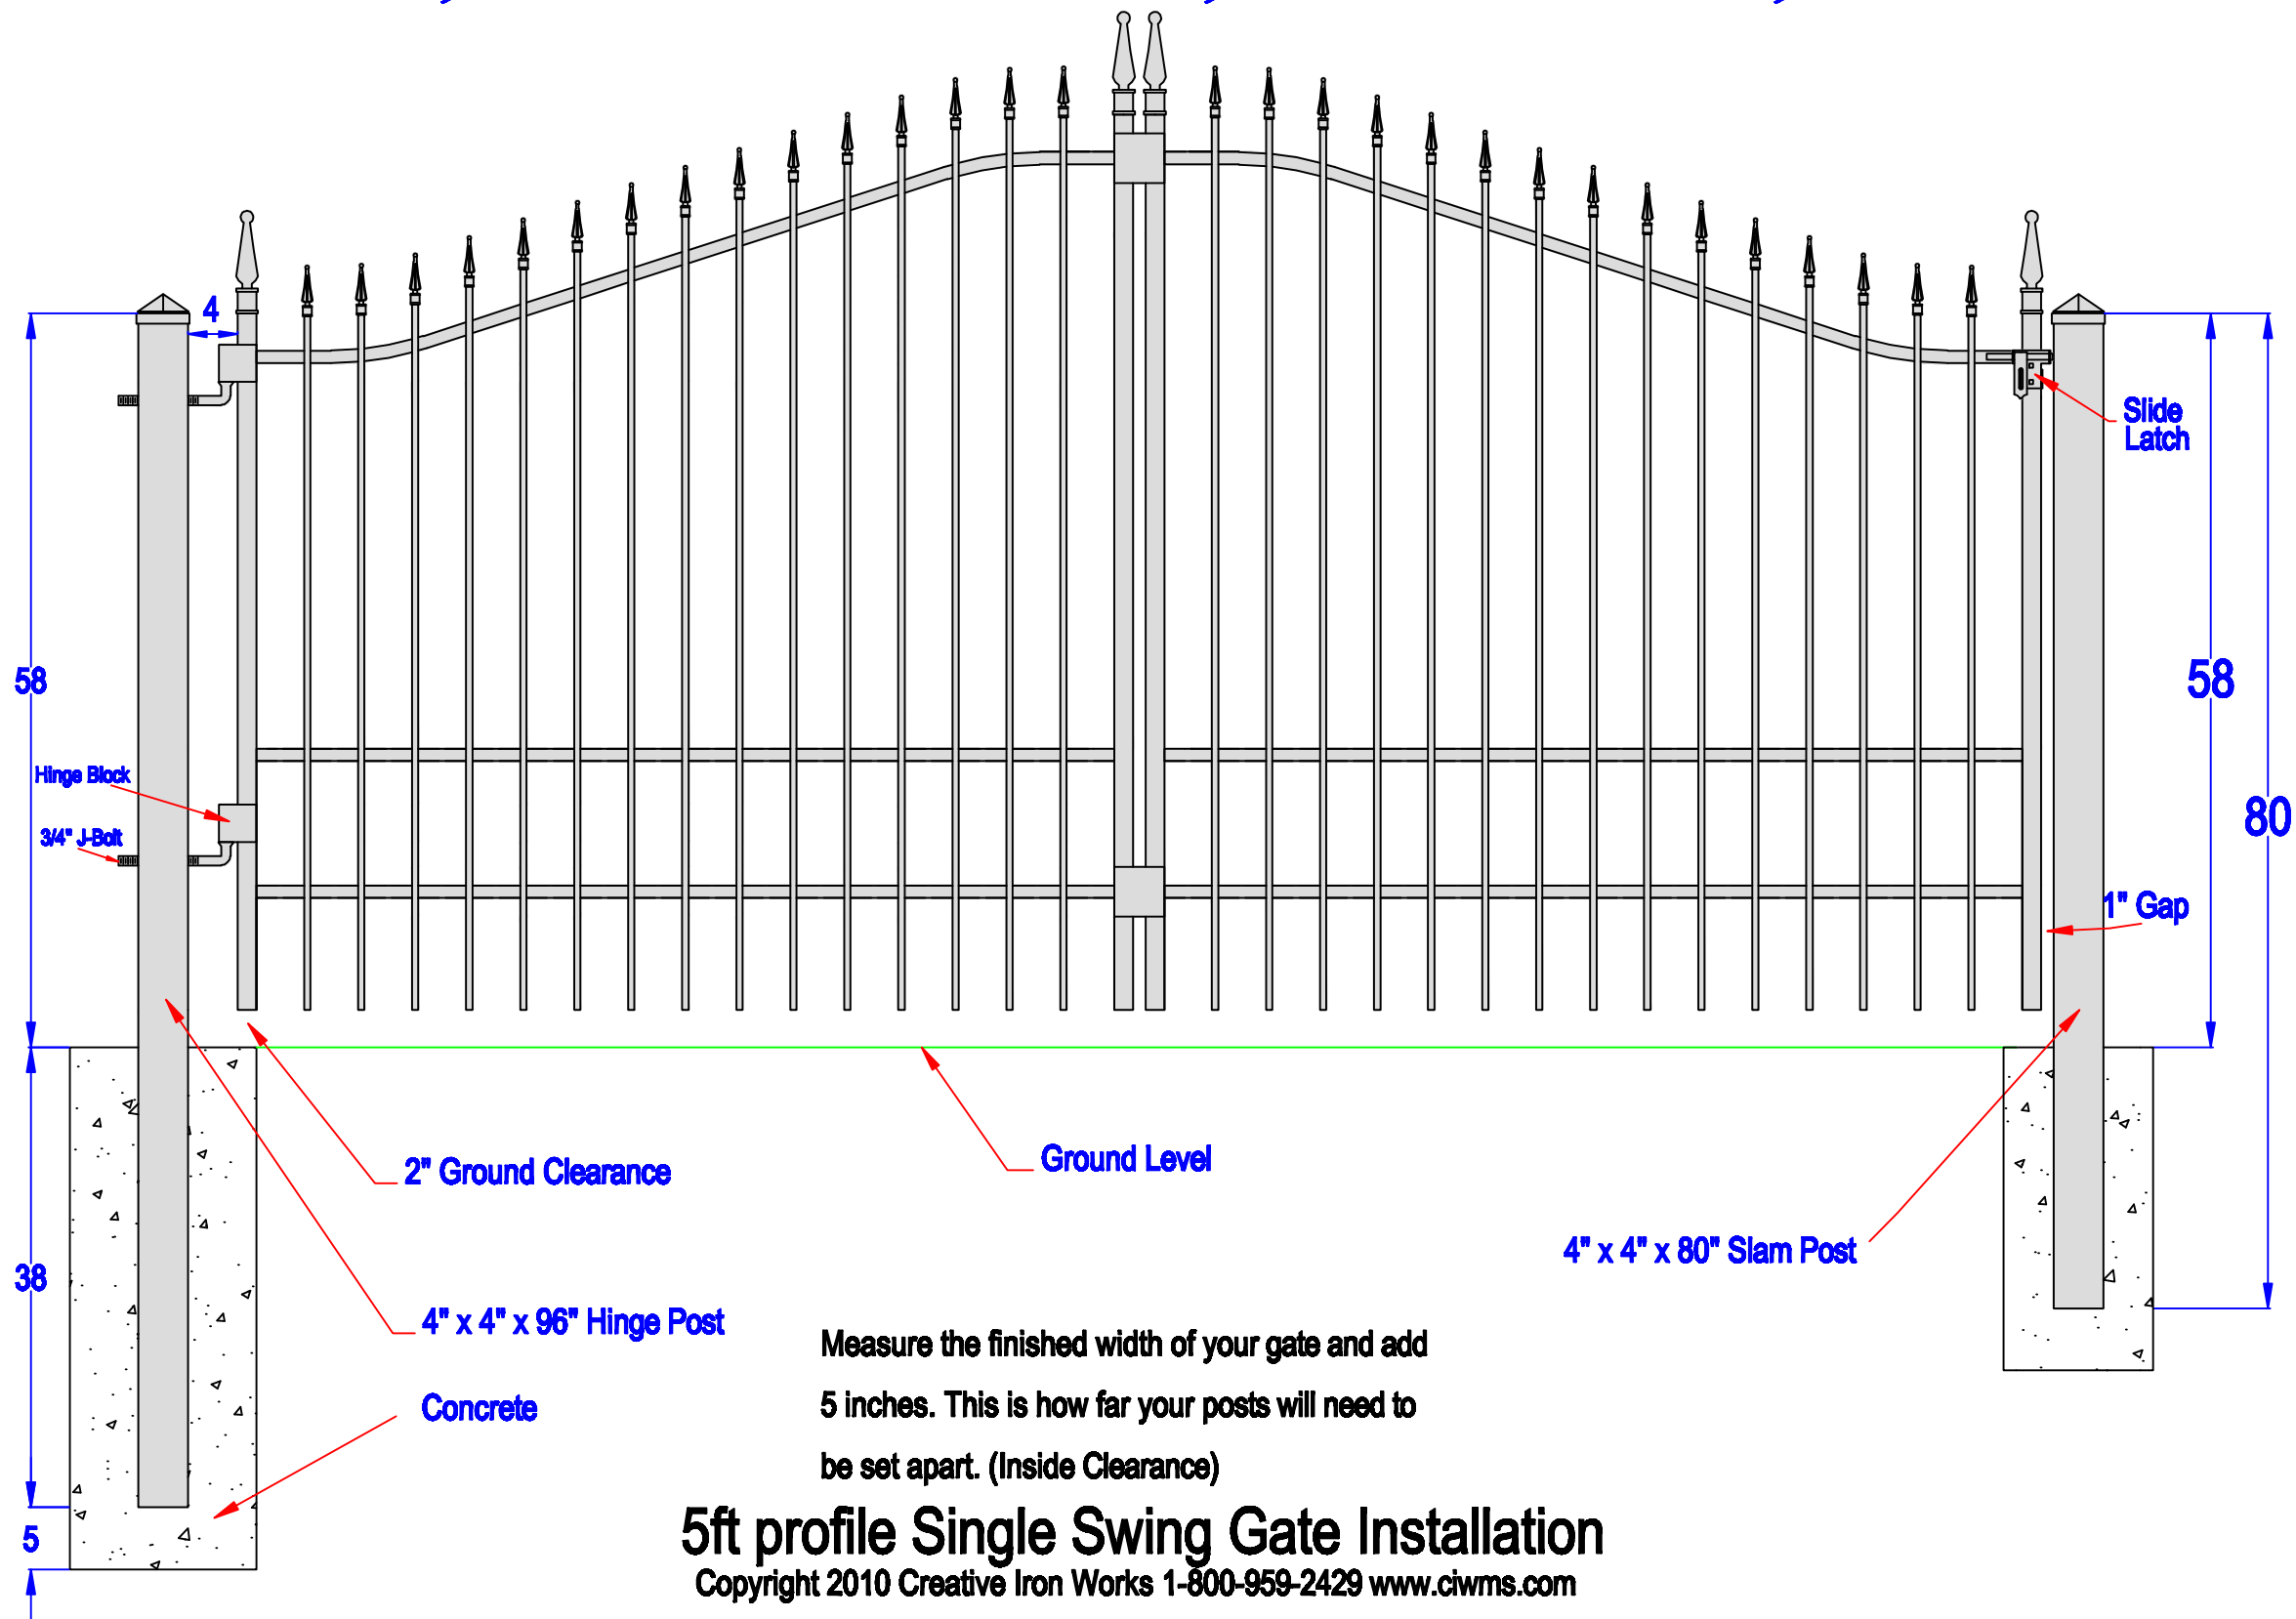

Measure the finished width of your gate and add 5 inches. This is how far your posts will need to be set apart. (Inside Clearance)

## 5ft profile Single Swing Gate Installation

Copyright 2010 Creative Iron Works 1-800-959-2429 www.ciwms.com